



MerryloT Air Quality CO2



Merrylot Motion Detection

Prove Installation

"Voc can also apply with stoker installation

Wotion sensor

Button

Temperature & humidity sensor

with buzzer


Temperature & humidity sensor

with buzzer


MerryloT Open / Close



MerryIoT Leak Detection

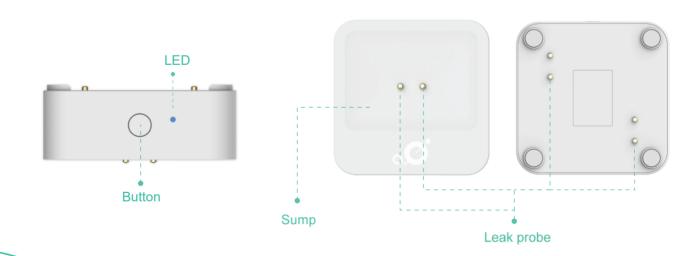

Basic Sensor Behaviors

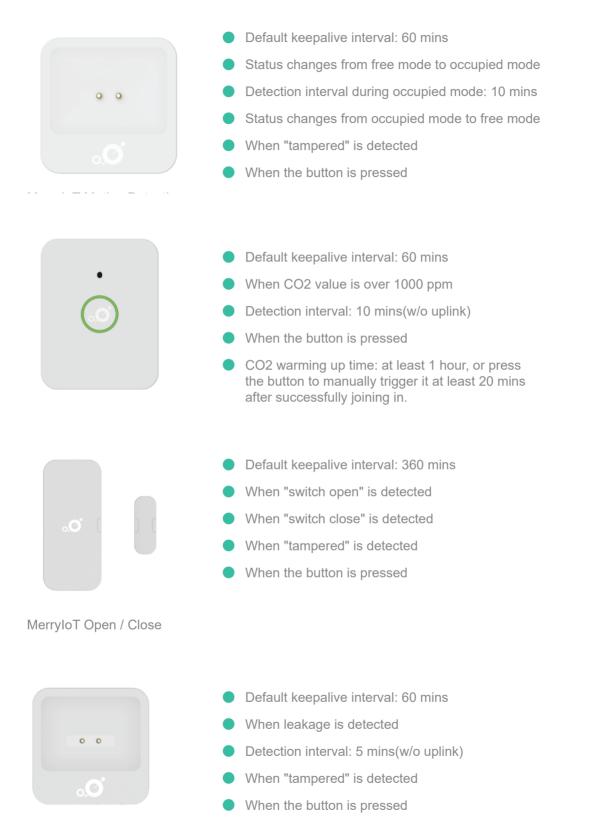

MerryloT Leak Detection

MerryloT Sensors Installation

* Please make sure to check Helium coverage before installing the MerrtyIoT Sensors


* Link: https://explorer.helium.com

Install and launch MerryIoT mobile application on your phone 1



*Search:MerryloT Sensor

2 Install the battery to power on the Sensor

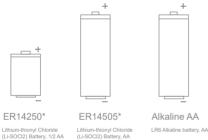

5*	Alkaline AA

	CO2	Motion	Open / Close	Leak
ER14250			~	
ER14505	~			
Alkaline AA		~		~

3 Open the app, scan the QR code on the back of the Sensor



MerryloT Motion Detection WSMS - 156




MerryloT Air Quality CO₂ WSMS - 157



MerryloT Open / Close WSMS - 158



MerryIoT Leak Detection WSMS - 159

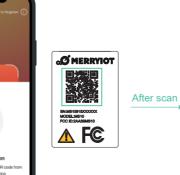



Chapter 3 - Installation


- 4 Press the button for 5 seconds to activate installation mode
- When the Sensor successfully joined a network, the LED will go on to constant lumination for 3 seconds 5
- Press the button on the Sensor. Once the Sensor is successfully connected, the following icon will 6 appear on the application

*The sensor real-time status will be updated




22°C Image: Second state 1000 CO2 (pm) CO2 (pm) Image: Solve state Pressed	Battery Vie 80% Air Quality CO2 Bedroom		
Humidty (Rh)			
		Pressed	
Device Log	🗄 Device Log >		

Once the Sensor is connected, install the Sensor to your desired location 7

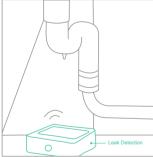



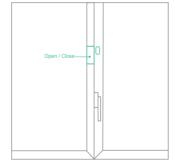


Open / Close In any rooms / mailbox on the window or door

CO2-	

CO₂ In any room / on the wall


*Note for CO2 installation: Strongly recommend installing the sensor on the wall to have more accurate readings.

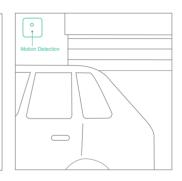

Motion Detection In a garage / at the front gate

8 FAQ: https://www.merryiot.com/FAQ


App Functions

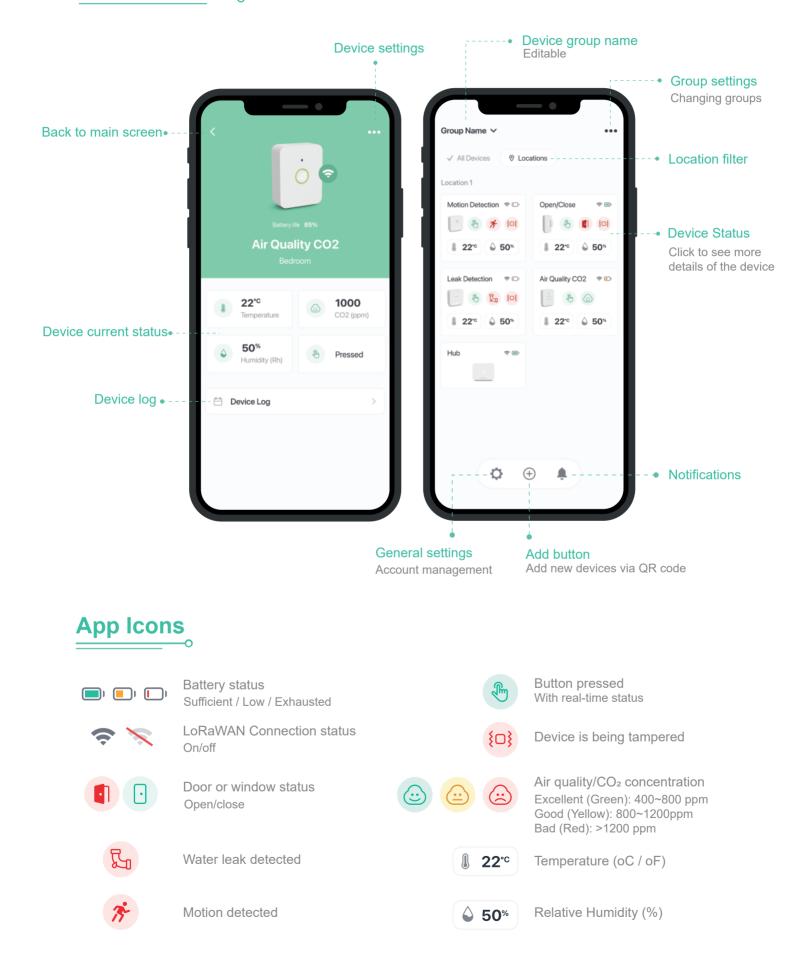

MerryloT Leak Detection -Battery Replacement Instruction

For water-proof purpose, the Leak Detection is sealed with rubber rings and screws

To replace the batteries, please use star-type screw driver to open the screws located in the four corners of the device

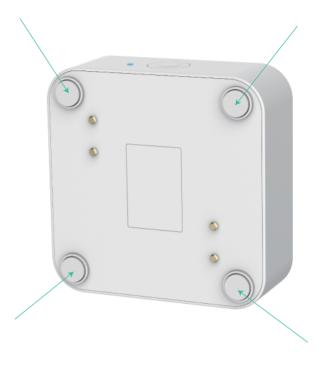



BQW_02_0037.001